

V-3030 v2 DMX addressing

Channel	Name	Parameters	Default DMX value
1	Pan	540 degree pan movement	
2	Tilt	270 degree tilt movement	
3	Shutter	0-1 shutter close 2-99 shutter strobe 100-199 shutter random 255 shutter open (on)	255
4	Dimmer	0-255 Dimmer intensity (255 full on)	255
5	Color Preset	0-4 Red 5-9 Yellow 10-14 Green 15-19 Cyan 20-24 Blue 25-29 Purple 50-252 Scroll through rainbow 255 White (MUST BE ON FOR R-G-B to work)	255
6	Red		255
7	Green		255
8	Blue		255
9	Color Scroll	0 no color scroll 6-255 color scroll speed	0
10	Pan Fine		
11	Tilt Fine		
12	Speed	0-255 movement speed, higher number is slower	0

Please note: shutter and color preset must all be at 255 (full on) to get the R-G-B channels to work!