

CH1: Pan	000-255	Pan(0-540)scan
CH2: Tilt	000-255	Tilt(0-280)scan
CH3: zoom	000-255	Zoom effect
	000-009	No strobe
	010-059	strobe from slow to fast
	060-064	no strobe
	065-114	strobe from slow to fast radomly
CH4: strobe/reso	115-119	no strobe
	120-169	strobe from slow to fast with higher brightness
	170-174	no strobe
	175-224	strobe from slow to fast with darker brightness
	225-234	no strobe
	235-244	no strobe, reset after 3 seconds
	245-255	no strobe
CH5: Color change	000-002	R
	003-004	RW
	005-007	RG
	008-009	RGW
	010-012	G
	013-014	GW
	015-017	GB
	018-019	GBW
	020-022	B
	023-024	BW
025-027	RB	
028-029	RBW	
030-039	W	

	040-049	RGBW
	050-083	R-on, G-on Gradually, B-off
	084-117	R-off-Gradually, G-on, B-off
	118-151	R-off, G-on, B-on gradually
	152-185	R-off, G-off gradually, B-on
	186-218	R-on gradually, G-off, B-on
	219-252	R-on, G-off, B-off gradually
	253-255	RGBW
CH6: dimmer	000-255	0%-100% dimmer
CH7: Red	000-256	0%-100% dimmer
CH8: Green	000-257	0%-100% dimmer
CH9: Blue	000-258	0%-100% dimmer
CH10: white	000-259	0%-100% dimmer
CH11: Color change rapid	000-005	RGBW, CH5 is for color choice
	006-127	color change gradually from slow to fast
CH12: pan fine	128-255	color change from slow to fast
	000-255	
CH13: tile fine	000-255	
	000-255	Scan from fast to slow
CH14: scan rapid	000-049	DMX mode
	050-099	Pan run automatically
	100-149	Tilt run automatically
	150-199	PAN AND TILE RUN automatically
200-255	Sound control	