



Manual



**LED Giga Bar 4 MKII**

---

## Table of contents

1. Safety instructions .....	3
1.1. FOR SAFE AND EFFICIENT OPERATION .....	3
1.2. Additional Information for safety .....	4
2. Statement .....	5
2.1. Product description .....	5
2.2. Technical Data .....	5
3. Control .....	6
3.1. Description of the display section .....	6
3.1.1. Structure of the menu .....	6
3.2. DMX Chart .....	7
3.2.1. Mode 1 (4 Channels) .....	7
3.2.2. Mode 2 (8 channels) .....	7
3.2.3. Mode 3 (12 channels) .....	8
3.2.4. Mode 4 (20 channels) .....	9
3.2.5. Mode 5 (32 channels) .....	11
3.2.6. Mode 6 (36 Kanäle) .....	12

## 1. Safety instructions



- This device is suitable for indoor use (not outdoors) only.
- All modifications to the device will void the warranty.
- Repairs are to carry out by skilled personnel only.
- Use only fuses of the same type and original parts as spare parts.
- Protect the unit from rain and humidity to avoid fire and electric shocks.
- Make sure to unplug the power supply before opening the housing.

### 1.1. FOR SAFE AND EFFICIENT OPERATION

#### **Be careful with heat and extreme temperature**

Avoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature bellow 32°F /0°C, or exceeding 104°F /40°C.

#### **Keep away from humidity, water and dust**

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

#### **Keep away from sources of hum and noise**

Such as transformer motor, tuner, TV set and amplifier.

#### **To avoid placing on un-stable location**

Select a level and stable location to avoid vibration.

#### **Do not use chemicals or volatile liquids for cleaning**

Use a clean dry cloth to wipe off the dust, or a wet soft cloth for stubborn dirt.

#### **If out of work, contact sales agency immediately**

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing, do not open the cabinet by yourself, it might result a danger of electric shock.

#### **Take care with the power cable**

Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug.

When not using the device for an extended period of time, be sure to disconnect the plug from the receptacle.

**Important:** Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems. Make sure the electrical connection is carried out by qualified personnel. All electrical and mechanical connections have to be carried out according to the European safety standards.

## 1.2. Additional Information for safety



### Excessive temperature

Ta=40°C

Please do not use the device if the temperature exceeds 40°C/104°F.



### Drop safety

If you install the device the mounting bracket has the ability to carry the tenfold load of the weight of the device. Always use a corresponding safety to safe the device additional. While working at the device the place below has to be vacated.



### Beware of electrical shock

Make sure the electrical connection is carried out by qualified personnel. Before you plug in the device make sure that the power supply system has the right voltage and also a crowbar. Every device has to be grounded. Unplug the power supply if you want to change a lamp or you have to open the device. You also have to accomplish this action if there is a thunderstorm or high humidity.



### Fire risk

Make sure that the fuse functioned. It is never allowed to bridge it. If you have to exchange it only use fuses of the same type.

It is not allowed cover fans and air in and outlets.

Make sure that there is a distance between the device and all objects in an area of 0.5m.

Don't put or mount anything on the lens.

## 2. Statement

When we send out the goods, they are well packaged and also at best condition. Every product was tested before delivery. If you recognize mistakes or damages please contact the delivery agent or the supplier. Please read this manual faithful. In this manual you can find information about the handling and the safety regulations of this product. If you disregard this manual we cannot give a warranty for it. Technical changes, which are for progress, may be possible at any time. They are not mentioned particularly in this manual, but affixed extra.

### 2.1. Product description

This product has one DMX mode. The fixture can operate in three different operating modes: DMX control, sound-active or in Master/Slave configuration. The fixture comes with several built-in programs that can be used, while operating as a dimmer unit or when used in multiples linked in a Master/slave configuration.

### 2.2. Technical Data

<b>Power supply</b>	
Voltage	AC 90V - 240V / 50-60HZ
Max. Power	140W
<b>Light source</b>	
Lamp type	16 pcs. 4in1 RGBW LEDs
Wattage	8W
Lifetime	80.000-100.000 h
<b>Connections</b>	
Power in	IEC power connector
DMX in/out	XLR
<b>Functions</b>	
Dimmer	0-100%
<b>Operation</b>	
Sound-to-light	yes
Automatic	yes
Master-Slave	yes
DMX	4/8/12/20/32/36 channels
<b>Hardware</b>	
Protection class	IP20
Skill	indoor
Weight	5.45kg
Material	Metal

### 3. Control

#### 3.1. Description of the display section

To get to the menu you have to press MENU. With UP/DOWN you can scroll through the menu. If you have reached the desired point of menu press ENTER. With UP/DOWN you can make your desired settings. Conform your settings with ENTER.

##### 3.1.1. Structure of the menu

Main menu	Submenu 1	Submenu 2	Submenu 3	Function description
Auto	Aut1	SP 1-SP 9		Select the desired auto mode and the speed of the auto mode
	Aut2			
	Aut3			
SoUn	SoU1			Select the desired sound mode
	SoU2			
	SoU3			
CoLo	CoL1-CoL9			Select the desired preset color
	AtF	Red	r000-r255	Dimmer red
		Gree	g000-g255	Dimmer green
		bLUe	b000-b255	Dimmer blue
		Ūhit	U000-U255	Dimmer white
Addr	A001-A512			Set the DMX address
Chnd	4Ch			Select the desired DMX mode
	8Ch			
	12Ch			
	20Ch			
	32Ch			
	36Ch			
SLAv	SLA			The device will act as slave
Uer	XXX			Shows the software version

## 3.2. DMX Chart

### 3.2.1. Mode 1 (4 Channels)

Channel	Value from	Value to	Function
1	0	255	Dimmer red 0-100% LED 1-16
2	0	255	Dimmer green 0-100% LED 1-16
3	0	255	Dimmer blue 0-100% LED 1-16
4	0	255	Dimmer white 0-100% LED 1-16

### 3.2.2. Mode 2 (8 channels)

Channel	Value from	Value to	Function
1	0	255	Dimmer 0-100% LED 1-16
2	0	7	No function
	8	15	Automatic program 1
	16	23	Automatic program 2
	24	31	Automatic program 3
	32	39	Automatic program 4
	40	47	Automatic program 5
	48	55	Automatic program 6
	56	63	Automatic program 7
	64	71	Automatic program 8
	72	79	Automatic program 9
	80	87	Automatic program 10
	88	95	Automatic program 11
	96	103	Automatic program 12
	104	111	Automatic program 13
	112	119	Automatic program 14
	120	127	Automatic program 15
	128	135	Automatic program 16
	136	143	Automatic program 17
	144	151	Automatic program 18
	152	159	Automatic program 19
160	167	Automatic program 20	

	168	175	Automatic program 21
	176	183	Automatic program 22
	184	191	Automatic program 23
	192	199	Automatic program 24
	200	207	Automatic program 25
	208	215	Automatic program 26
	216	223	Automatic program 27
	224	231	Automatic program 28
	232	239	Sound mode 1
	240	247	Sound mode 2
	248	255	Sound mode 3
3	0	255	Speed slow-fast
4	0	255	Strobe slow-fast
5	0	255	Dimmer red 0-100% LED 1-16
6	0	255	Dimmer green 0-100% LED 1-16
7	0	255	Dimmer blue 0-100% LED 1-16
8	0	255	Dimmer white 0-100% LED 1-16

### 3.2.3. Mode 3 (12 channels)

Channel	Value from	Value to	Function
1	0	255	Dimmer 0-100% LED 1-16
2	0	7	No function
	8	15	Automatic program 1
	16	23	Automatic program 2
	24	31	Automatic program 3
	32	39	Automatic program 4
	40	47	Automatic program 5
	48	55	Automatic program 6
	56	63	Automatic program 7
	64	71	Automatic program 8
	72	79	Automatic program 9
	80	87	Automatic program 10
	88	95	Automatic program 11
96	103	Automatic program 12	



	104	111	Automatic program 13
	112	119	Automatic program 14
	120	127	Automatic program 15
	128	135	Automatic program 16
	136	143	Automatic program 17
	144	151	Automatic program 18
	152	159	Automatic program 19
	160	167	Automatic program 20
	168	175	Automatic program 21
	176	183	Automatic program 22
	184	191	Automatic program 23
	192	199	Automatic program 24
	200	207	Automatic program 25
	208	215	Automatic program 26
	216	223	Automatic program 27
	224	231	Automatic program 28
	232	239	Sound mode 1
	240	247	Sound mode 2
	248	255	Sound mode 3
3	0	255	Speed slow-fast
4	0	255	Strobe slow-fast
5	0	255	Dimmer red 0-100% LED 1-8
6	0	255	Dimmer green 0-100% LED 1-8
7	0	255	Dimmer blue 0-100% LED 1-8
8	0	255	Dimmer white 0-100% LED 1-8
5	0	255	Dimmer red 0-100% LED 9-16
6	0	255	Dimmer green 0-100% LED 9-16
7	0	255	Dimmer blue 0-100% LED 9-16
8	0	255	Dimmer white 0-100% LED 9-16

### 3.2.4. Mode 4 (20 channels)

Channel	Value from	Value to	Function
1	0	255	Dimmer 0-100% LED 1-16
2	0	7	No function

	8	15	Automatic program 1
	16	23	Automatic program 2
	24	31	Automatic program 3
	32	39	Automatic program 4
	40	47	Automatic program 5
	48	55	Automatic program 6
	56	63	Automatic program 7
	64	71	Automatic program 8
	72	79	Automatic program 9
	80	87	Automatic program 10
	88	95	Automatic program 11
	96	103	Automatic program 12
	104	111	Automatic program 13
	112	119	Automatic program 14
	120	127	Automatic program 15
	128	135	Automatic program 16
	136	143	Automatic program 17
	144	151	Automatic program 18
	152	159	Automatic program 19
	160	167	Automatic program 20
	168	175	Automatic program 21
	176	183	Automatic program 22
	184	191	Automatic program 23
	192	199	Automatic program 24
	200	207	Automatic program 25
	208	215	Automatic program 26
	216	223	Automatic program 27
	224	231	Automatic program 28
	232	239	Sound mode 1
	240	247	Sound mode 2
	248	255	Sound mode 3
3	0	255	Speed slow-fast
4	0	255	Strobe slow-fast
5	0	255	Dimmer red 0-100% LED 1-4
6	0	255	Dimmer green 0-100% LED 1-4
7	0	255	Dimmer blue 0-100% LED 1-4

8	0	255	Dimmer white 0-100% LED 1-4
9	0	255	Dimmer red 0-100% LED 5-8
10	0	255	Dimmer green 0-100% LED 5-8
11	0	255	Dimmer blue 0-100% LED 5-8
12	0	255	Dimmer white 0-100% LED 5-8
13	0	255	Dimmer red 0-100% LED 9-12
14	0	255	Dimmer green 0-100% LED 9-12
15	0	255	Dimmer blue 0-100% LED 9-12
16	0	255	Dimmer white 0-100% LED 9-12
17	0	255	Dimmer red 0-100% LED 13-16
18	0	255	Dimmer green 0-100% LED 13-16
19	0	255	Dimmer blue 0-100% LED 13-16
20	0	255	Dimmer white 0-100% LED 13-16

### 3.2.5. Mode 5 (32 channels)

Channel	Value from	Value to	Function
1	0	255	Dimmer red 0-100% LED 1-2
2	0	255	Dimmer green 0-100% LED 1-2
3	0	255	Dimmer blue 0-100% LED 1-2
4	0	255	Dimmer white 0-100% LED 1-2
5	0	255	Dimmer red 0-100% LED 3-4
6	0	255	Dimmer green 0-100% LED 3-4
7	0	255	Dimmer blue 0-100% LED 3-4
8	0	255	Dimmer white 0-100% LED 3-4
9	0	255	Dimmer red 0-100% LED 5-6
10	0	255	Dimmer green 0-100% LED 5-6
11	0	255	Dimmer blue 0-100% LED 5-6
12	0	255	Dimmer white 0-100% LED 5-6
13	0	255	Dimmer red 0-100% LED 7-8
14	0	255	Dimmer green 0-100% LED 7-8
15	0	255	Dimmer blue 0-100% LED 7-8
16	0	255	Dimmer white 0-100% LED 7-8
17	0	255	Dimmer red 0-100% LED 9-10
18	0	255	Dimmer green 0-100% LED 9-10

19	0	255	Dimmer blue 0-100% LED 9-10
20	0	255	Dimmer white 0-100% LED 9-10
21	0	255	Dimmer red 0-100% LED 11-12
22	0	255	Dimmer green 0-100% LED 11-12
23	0	255	Dimmer blue 0-100% LED 11-12
24	0	255	Dimmer white 0-100% LED 11-12
25	0	255	Dimmer red 0-100% LED 13-14
26	0	255	Dimmer green 0-100% LED 13-14
27	0	255	Dimmer blue 0-100% LED 13-14
28	0	255	Dimmer white 0-100% LED 13-14
29	0	255	Dimmer red 0-100% LED 15-16
30	0	255	Dimmer green 0-100% LED 15-16
31	0	255	Dimmer blue 0-100% LED 15-16
32	0	255	Dimmer white 0-100% LED 15-16

### 3.2.6. Mode 6 (36 Kanäle)

Channel	Value from	Value to	Function
1	0	255	Dimmer 0-100% LED 1-16
2	0	7	No function
	8	15	Automatic program 1
	16	23	Automatic program 2
	24	31	Automatic program 3
	32	39	Automatic program 4
	40	47	Automatic program 5
	48	55	Automatic program 6
	56	63	Automatic program 7
	64	71	Automatic program 8
	72	79	Automatic program 9
	80	87	Automatic program 10
	88	95	Automatic program 11
	96	103	Automatic program 12
	104	111	Automatic program 13
	112	119	Automatic program 14
120	127	Automatic program 15	

	128	135	Automatic program 16
	136	143	Automatic program 17
	144	151	Automatic program 18
	152	159	Automatic program 19
	160	167	Automatic program 20
	168	175	Automatic program 21
	176	183	Automatic program 22
	184	191	Automatic program 23
	192	199	Automatic program 24
	200	207	Automatic program 25
	208	215	Automatic program 26
	216	223	Automatic program 27
	224	231	Automatic program 28
	232	239	Sound mode 1
	240	247	Sound mode 2
	248	255	Sound mode 3
3	0	255	Speed slow-fast
4	0	255	Strobe slow-fast
5	0	255	Dimmer red 0-100% LED 1-2
6	0	255	Dimmer green 0-100% LED 1-2
7	0	255	Dimmer blue 0-100% LED 1-2
8	0	255	Dimmer white 0-100% LED 1-2
9	0	255	Dimmer red 0-100% LED 3-4
10	0	255	Dimmer green 0-100% LED 3-4
11	0	255	Dimmer blue 0-100% LED 3-4
12	0	255	Dimmer white 0-100% LED 3-4
13	0	255	Dimmer red 0-100% LED 5-6
14	0	255	Dimmer green 0-100% LED 5-6
15	0	255	Dimmer blue 0-100% LED 5-6
16	0	255	Dimmer white 0-100% LED 5-6
17	0	255	Dimmer red 0-100% LED 7-8
18	0	255	Dimmer green 0-100% LED 7-8
19	0	255	Dimmer blue 0-100% LED 7-8
20	0	255	Dimmer white 0-100% LED 7-8
21	0	255	Dimmer red 0-100% LED 9-10
22	0	255	Dimmer green 0-100% LED 9-10

---

23	0	255	Dimmer blue 0-100% LED 9-10
24	0	255	Dimmer white 0-100% LED 9-10
25	0	255	Dimmer red 0-100% LED 11-12
26	0	255	Dimmer green 0-100% LED 11-12
27	0	255	Dimmer blue 0-100% LED 11-12
28	0	255	Dimmer white 0-100% LED 11-12
29	0	255	Dimmer red 0-100% LED 13-14
30	0	255	Dimmer green 0-100% LED 13-14
31	0	255	Dimmer blue 0-100% LED 13-14
32	0	255	Dimmer white 0-100% LED 13-14
33	0	255	Dimmer red 0-100% LED 15-16
34	0	255	Dimmer green 0-100% LED 15-16
35	0	255	Dimmer blue 0-100% LED 15-16
36	0	255	Dimmer white 0-100% LED 15-16



**Importer:**

**B & K Braun GmbH**

**Industriestraße 2**

**D-76307 Karlsbad**

**[www.bkbraun.com](http://www.bkbraun.com)**

**[info@bkbraun.com](mailto:info@bkbraun.com)**

