Ai/Specifics

Debugging/Tracing the Signal

There are some helpers to let you find how your signal is being modified, and which values exactly are spit out from a module:

• from the Ai titlebar select View/Inspector. This opens a little window which displays the value in a port where you hover the mouse

From:

https://www.avosupport.de/wiki/ - AVOSUPPORT

Permanent link:

https://www.avosupport.de/wiki/ai/specifics/signaltracing?rev=1539591475



