

Function

Handles.MobileWingAExecutor.ChangePage

ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

```
Void Handles.MobileWingAExecutors.ChangePage(int32 index)
```

| | |
|---------------------|--|
| API | no |
| description | toggles the Executors on the first connected Titan Mobile Faderwing to a specific page |
| Namespaces | Handles.MobileWingAExecutor |
| parameter | <code>Int32</code> index - the index of the page to change to |
| return value | <code>(Void)</code> |

Example in

[Pages - Change All Playback Pages:](#)

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">
  <description>Changes the Mobile Wing playbacks page to page
1.</description>
  <sequence>
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>
  </sequence>
</macro>
```

Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

Remarks

From:
<https://www.avosupport.de/wiki/> - **AVOSUPPORT**

Permanent link:
<https://www.avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage>

Last update: **2018/10/31 17:00**

