

Function

# Handles.MobileWingAExecutor.ChangePage

## ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

```
Void Handles.MobileWingAExecutors.ChangePage(int32 index)
```

<b>API</b>	no
<b>description</b>	toggles the Executors on the first connected Titan Mobile Faderwing to a specific page
<b>Namespaces</b>	<a href="#">Handles.MobileWingAExecutor</a>
<b>parameter</b>	<code>Int32</code> index - the index of the page to change to
<b>return value</b>	<code>(Void)</code>

## Example in

[Pages - Change All Playback Pages:](#)

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">  
  <description>Changes the Mobile Wing playbacks page to page  
1.</description>  
  <sequence>  
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>  
  </sequence>  
</macro>
```

## Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

## Remarks

From:  
<https://www.avosupport.de/wiki/> - **AVOSUPPORT**

Permanent link:  
<https://www.avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage>

Last update: **2018/10/31 17:00**

