

Function

Handles.MobileWingAExecutors.ChangePage

ASSUMPTION

This function is not documented and simply deducted from other factory macros, and found working. Hence, this entire documentation is assumed.

Void Handles.MobileWingAExecutors.ChangePage(int32 index)

API	no
description	toggles the Executors on the first connected Titan Mobile Faderwing to a specific page
Namespaces	handles.mobilewingaexecutors
parameter	Int32 index - the index of the page to change to
return value	(Void)

Example in

[Pages - Change All Playback Pages:](#)

```
<macro id="Avolites.Macros.ChangeToPage1" name="Playbacks Page 1">
  <description>Changes the Mobile Wing playbacks page to page
1.</description>
  <sequence>
    <step>Handles.MobileWingAExecutor.ChangePage(0)</step>
  </sequence>
</macro>
```

Also used in

- [Pages - Change All Playback Pages](#)
- [Function list](#)

Remarks

From: <https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link: <https://www.avosupport.de/wiki/macros/function/handles.mobilewingaexecutor.changepage?rev=1511344774>

Last update: 2017/11/22 09:59

