

Function

PanelManager.SetScreenState

```
Void PanelManager.SetScreenState(String group, Int32 index, Boolean enable)
```

API	http://api.avolites.com/11.0/PanelManager.SetScreenState.html
description	Sets the state of a screen
namespace	PanelManager
parameter	group (String) : The screengroup the display belongs to. index (Int32) : the index of the display in the group. enable (Boolean) : If set to true enable.
return value	Void

Possible screengroups:

- externalDisplay (index 0, 1)
- main (index 0)
- touch (index 0, 1)
- synergyLeft (index 0)
- synergyRight (index 1)
- wingALcd (index 0...5)
- wingBLcd (index 0...5)
- tnpScreen

Example in

[System - Enable External Display \(PC-Suite only\)](#):

```
<step>PanelManager.SetScreenState("externalDisplay", 0,  
System.ExternalDisplay.Enabled)</step>
```

Also used in

- [System - Enable External Display \(PC-Suite only\)](#)

Remarks

From:
<https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link:
<https://www.avosupport.de/wiki/macros/function/panelmanager.setscreenstate?rev=1536431825>

Last update: 2018/09/08 18:37

