

Function

Patch.SetCurrentDmxAssignment

```
Void Patch.SetCurrentDmxAssignment(DmxAssignment address)
```

API	https://api.avolites.com/18.0/api/Patch.SetCurrentDmxAssignment.html
description	Sets the current DMX assignment which is an ObservableDmxAssignment from a normal DmxAssignment.
namespace	Patch
parameter	address (DmxAssignment) : the address to be used in the next patch process
return value	Void

This inherently sets the property [Patch.CurrentDmxAssignment](#).

Example in

[Patch - Repatch Selected Fixtures](#):

```
<step>Patch.SetCurrentDmxAssignment(42.1)</step>
```

Also used in

- [Patch - Repatch Selected Fixtures](#)
- [Patch.CurrentDmxAssignment](#)

Remarks

From:
<https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link:
<https://www.avosupport.de/wiki/macros/function/patch.setcurrentdmxassignment?rev=1745919809>

Last update: 2025/04/29 09:43

