

Function

# Patch.SetCurrentDmxAssignment

```
Void Patch.SetCurrentDmxAssignment(DmxAssignment address)
```

<b>API</b>	<a href="https://api.avolites.com/18.0/api/Patch.SetCurrentDmxAssignment.html">https://api.avolites.com/18.0/api/Patch.SetCurrentDmxAssignment.html</a>
<b>description</b>	Sets the current DMX assignment which is an ObservableDmxAssignment from a normal DmxAssignment.
<b>namespace</b>	<a href="#">Patch</a>
<b>parameter</b>	address ( <a href="#">DmxAssignment</a> ) : the address to be used in the next patch process
<b>return value</b>	<a href="#">Void</a>

This inherently sets the property [Patch.CurrentDmxAssignment](#).

## Example in

[Patch - Repatch Selected Fixtures](#):

```
<step>Patch.SetCurrentDmxAssignment(42.1)</step>
```

## Also used in

- [Patch - Repatch Selected Fixtures](#)
- [Patch.CurrentDmxAssignment](#)

## Remarks

From:  
<https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link:  
<https://www.avosupport.de/wiki/macros/function/patch.setcurrentdmxassignment?rev=1745919809>

Last update: 2025/04/29 09:43

