

Function

# Triggers.ToggleMappingEnable

Void Triggers.ToggleMappingEnable(Int32 mappingId)

|                     |  |
|---------------------|--|
| <b>API</b>          | <a href="http://api.avolites.com/10.1/Triggers.ToggleMappingEnable.html">http://api.avolites.com/10.1/Triggers.ToggleMappingEnable.html</a>                      |
| <b>description</b>  | Toggles whether a mapping is enabled.  |
| <b>namespace</b>    | Triggers   |
| <b>parameter</b>    | mappingId ( Int32 ) : The ID of the trigger mapping to toggle<br>As the first two mappings are predefined and cannot be altered, the first user mapping is ID=2. |
| <b>return value</b> | Void   |

### Example in

[Trigger - Toggle Trigger Mappings v10/v11:](#)

```
<step>Triggers.ToggleMappingEnable(2)</step>
```

### Also used in

- [Trigger - Toggle Trigger Mappings v10/v11](#)
- [Function list](#)
- [Triggers.ToggleMappingEnabledByHandle\(\)](#)

### Remarks

From: <https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link: <https://www.avosupport.de/wiki/macros/function/triggers.togglemappingenable?rev=1516349976>

Last update: 2018/01/19 08:19

