

Function

Triggers.ToggleMappingEnable

Void Triggers.ToggleMappingEnable(Int32 mappingId)

API	http://api.avolites.com/10.1/Triggers.ToggleMappingEnable.html
description	Toggles whether a mapping is enabled.
namespace	Triggers
parameter	mappingId (Int32) : The ID of the trigger mapping to toggle As the first two mappings are predefined and cannot be altered, the first user mapping is ID=2.
return value	Void

Example in

[Trigger - Toggle Trigger Mappings v10/v11:](#)

```
<step>Triggers.ToggleMappingEnable(2)</step>
```

Also used in

- [Trigger - Toggle Trigger Mappings v10/v11](#)
- [Function list](#)
- [Triggers.ToggleMappingEnabledByHandle\(\)](#)

Remarks

From: <https://www.avosupport.de/wiki/> - **AVOSUPPORT**

Permanent link: <https://www.avosupport.de/wiki/macros/function/triggers.togglemappingenable?rev=1516349976>

Last update: **2018/01/19 08:19**

