


Strobe Pattern

Slope	rectangle, duty cycle = 1:1, double frequency
Range	-1000 ... 1000
used in	tbd.

(created from the shapefile using [Converting Patterns in Excel](#))

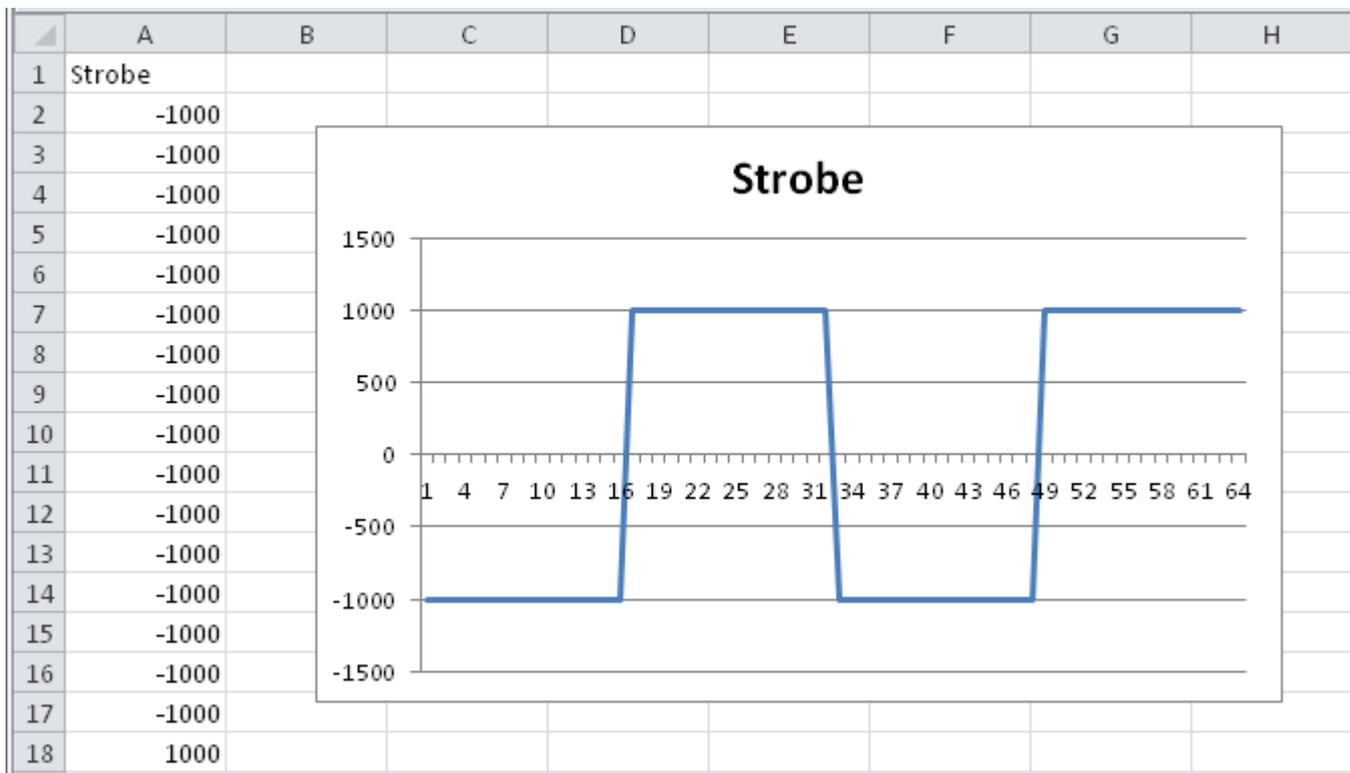

From: <https://www.avosupport.de/wiki/> - AVOSUPPORT

Permanent link: <https://www.avosupport.de/wiki/shapes/pattern/strobe?rev=1510612458>

Last update: 2017/11/13 22:34

